



ASSEMBLY INSTRUCTIONS




1

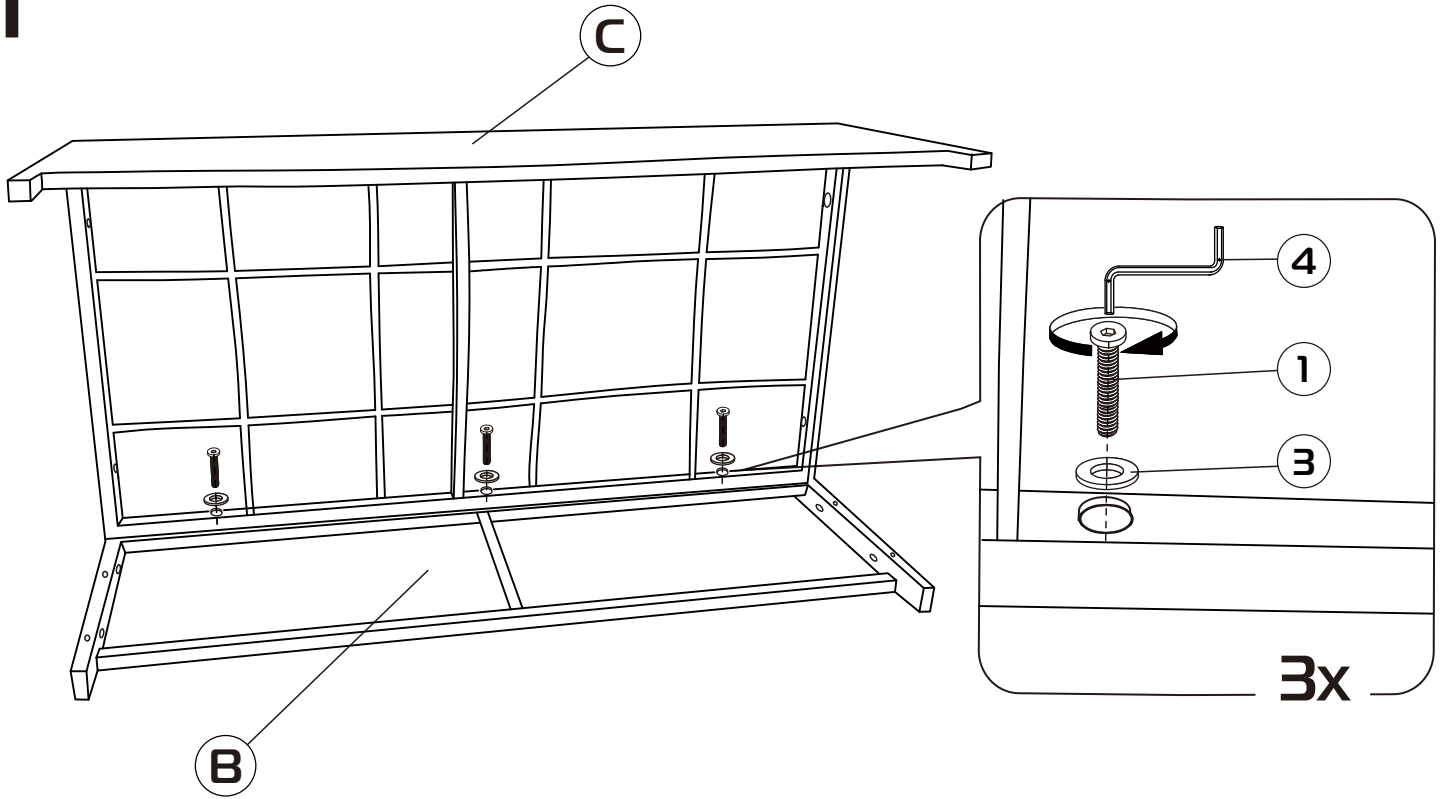


2

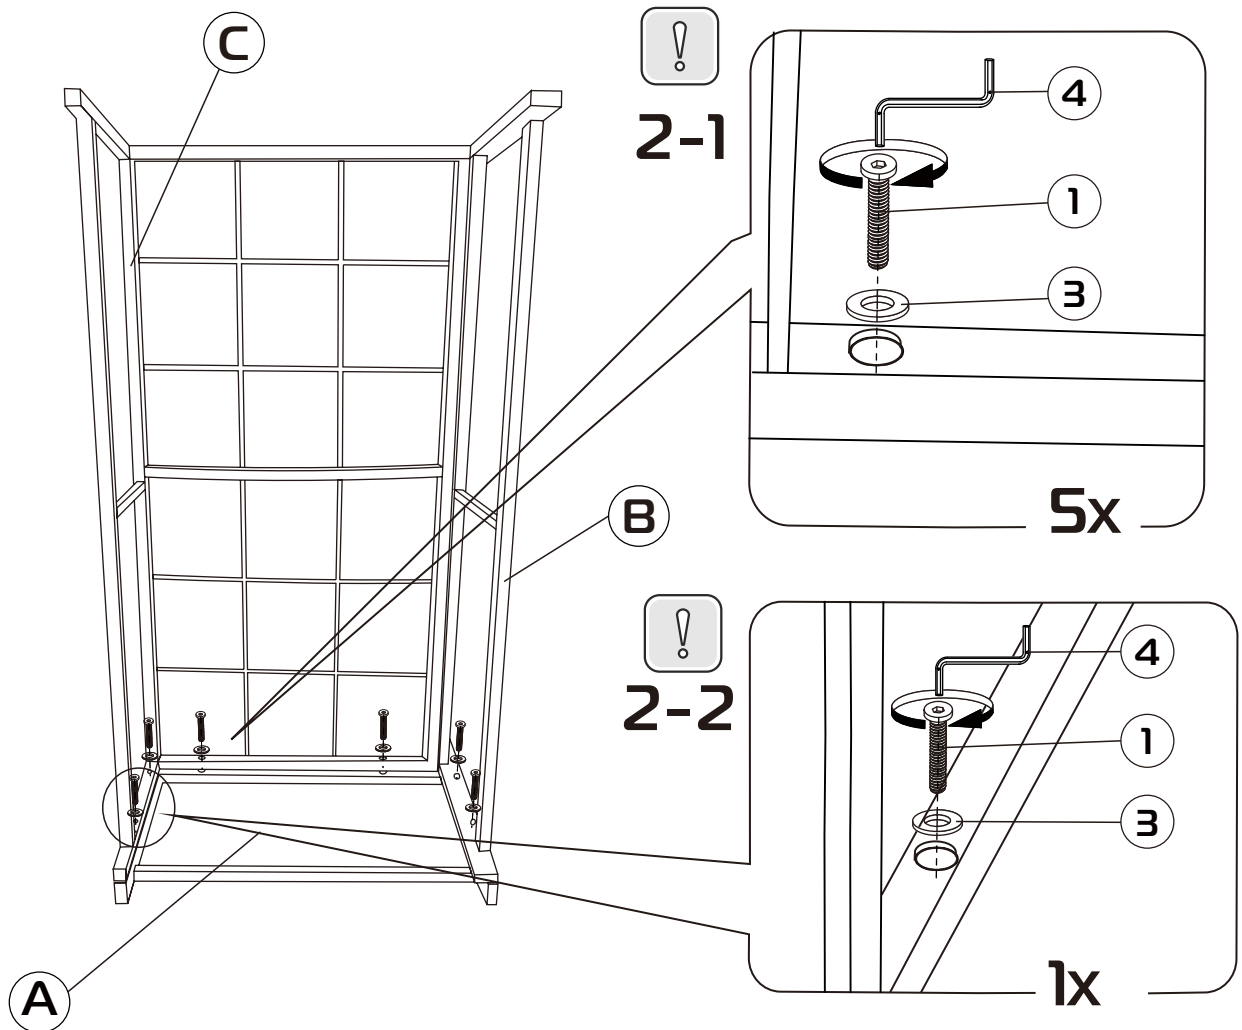


3

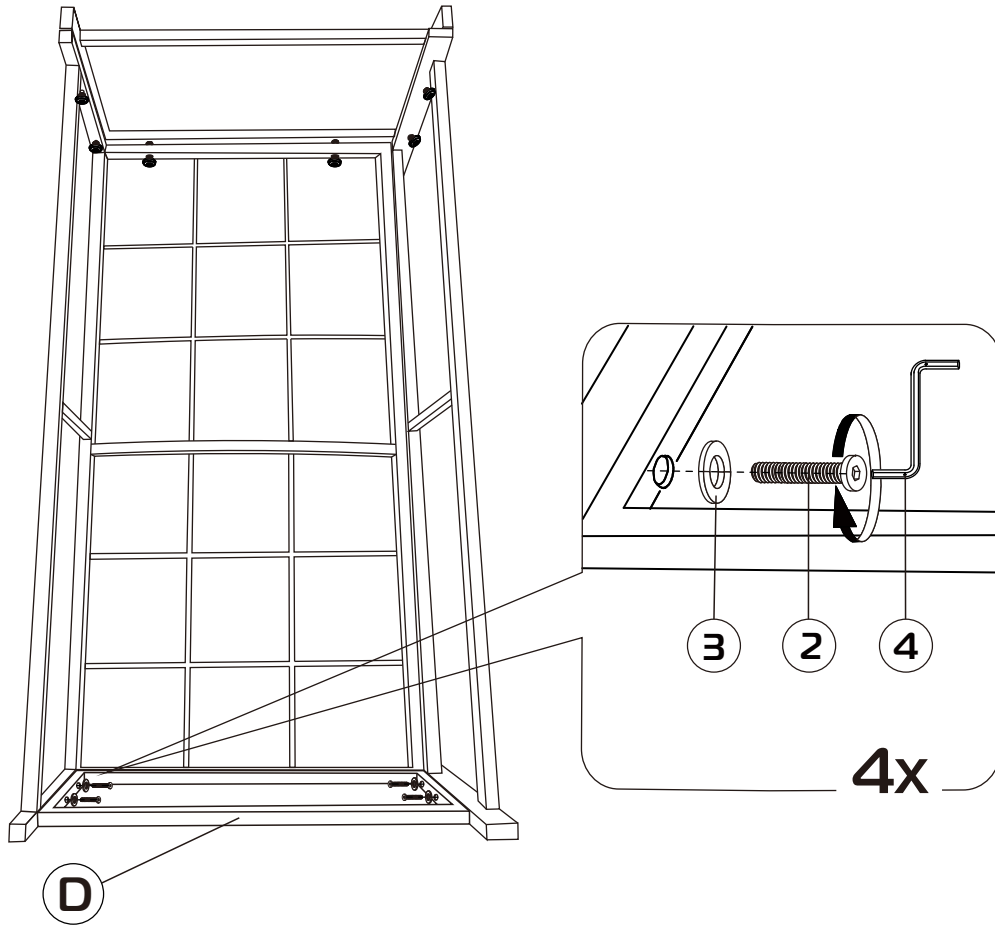


4

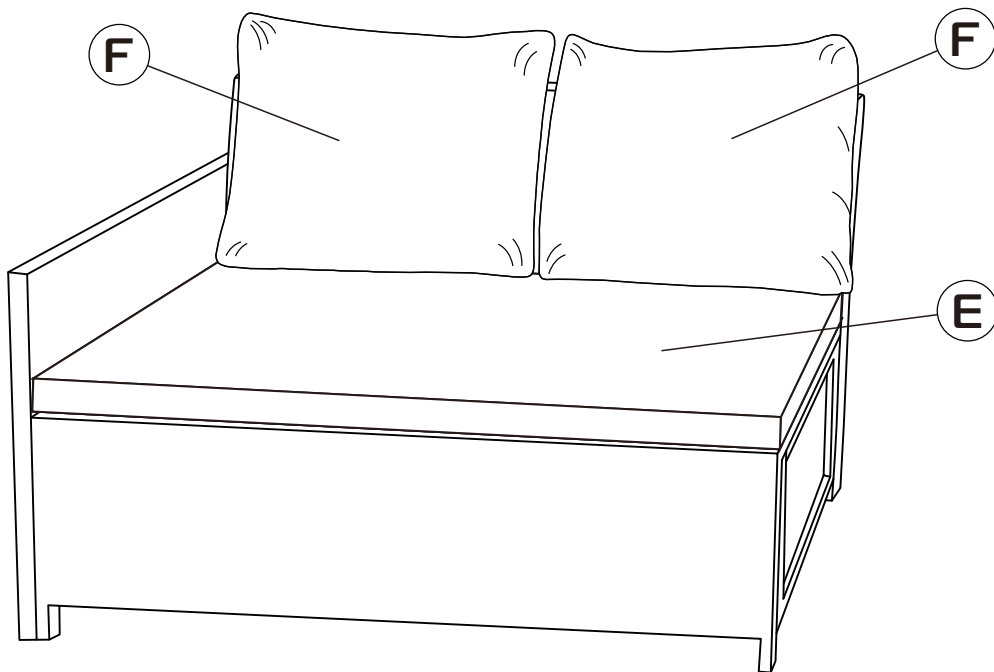

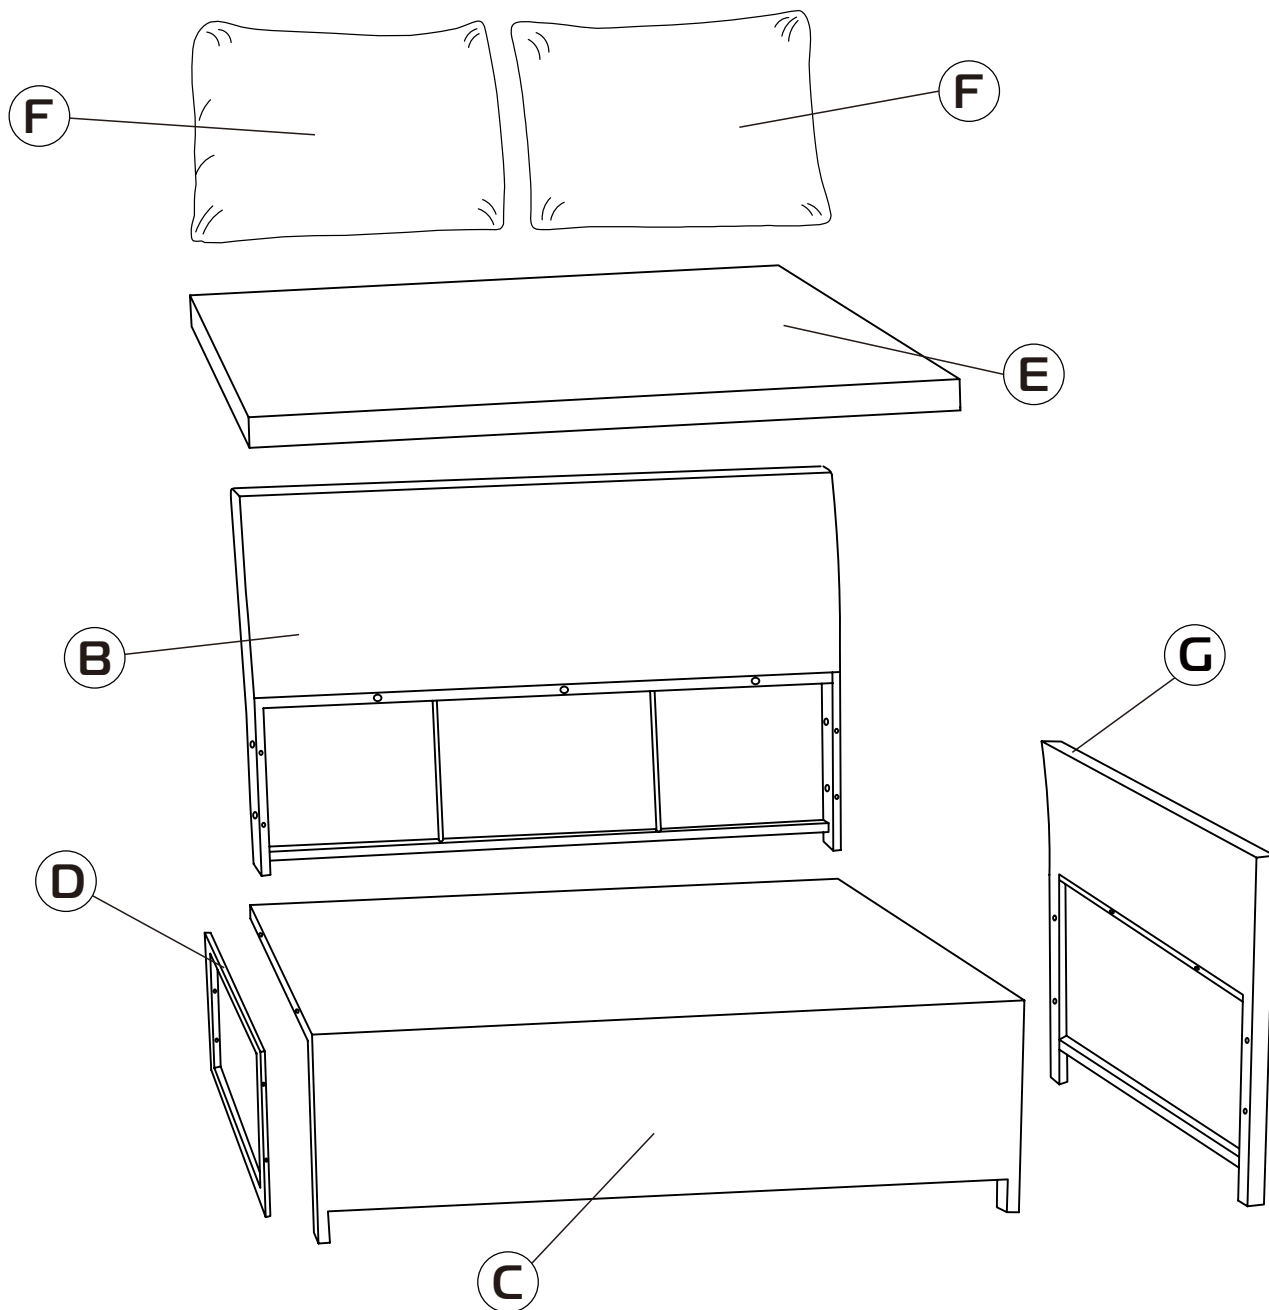


B -x1 **C** -x1 **D** -x1 **E** -x1 **F** -x2 **G** -x1


1:1

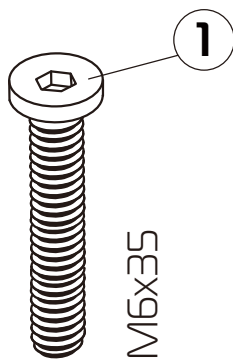


x9

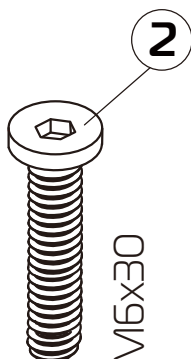

x4

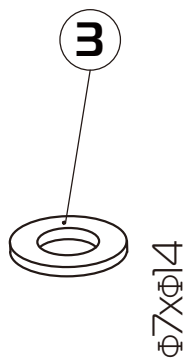


x13

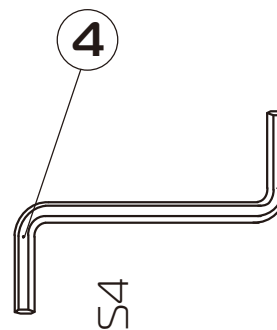


x1




1

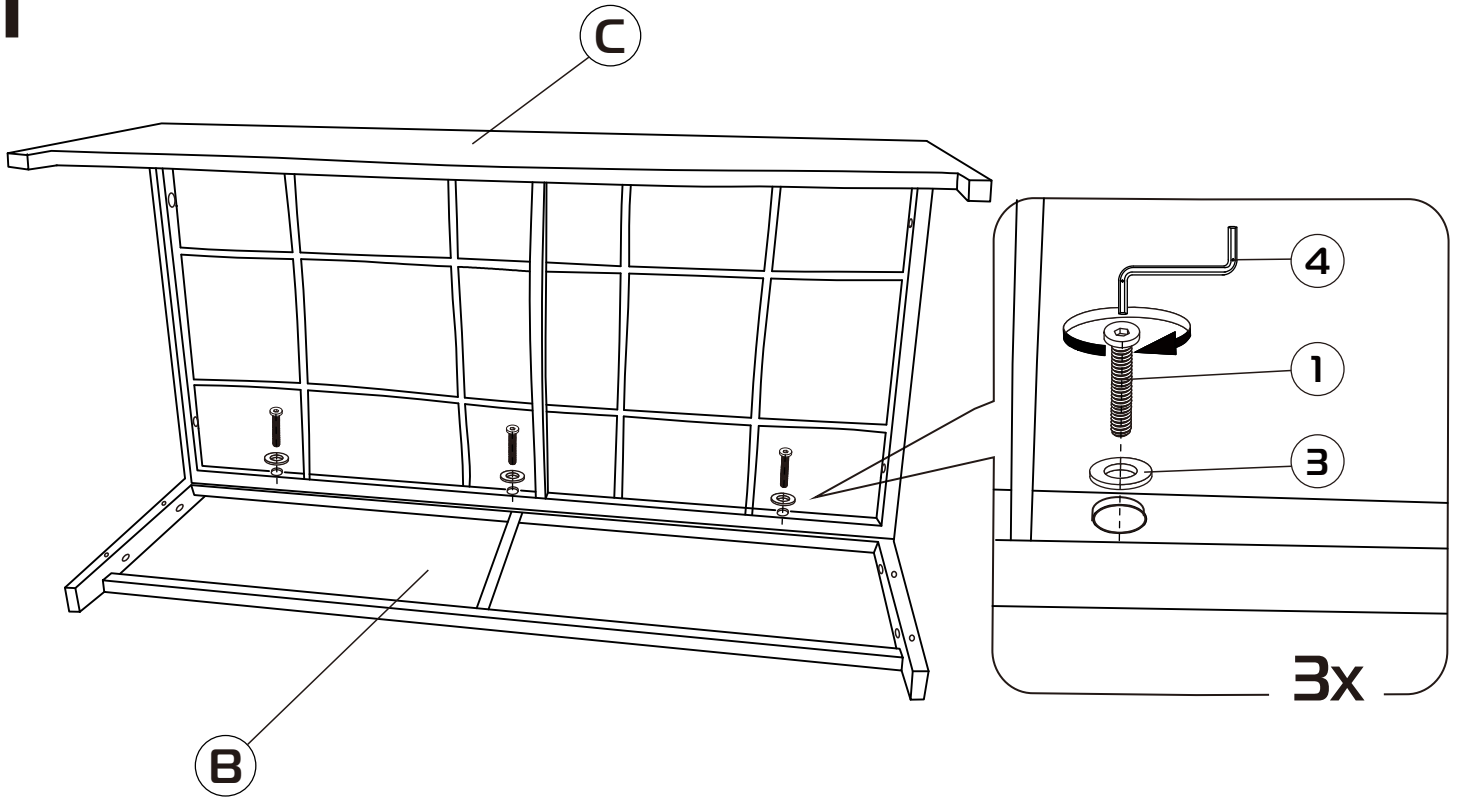


2

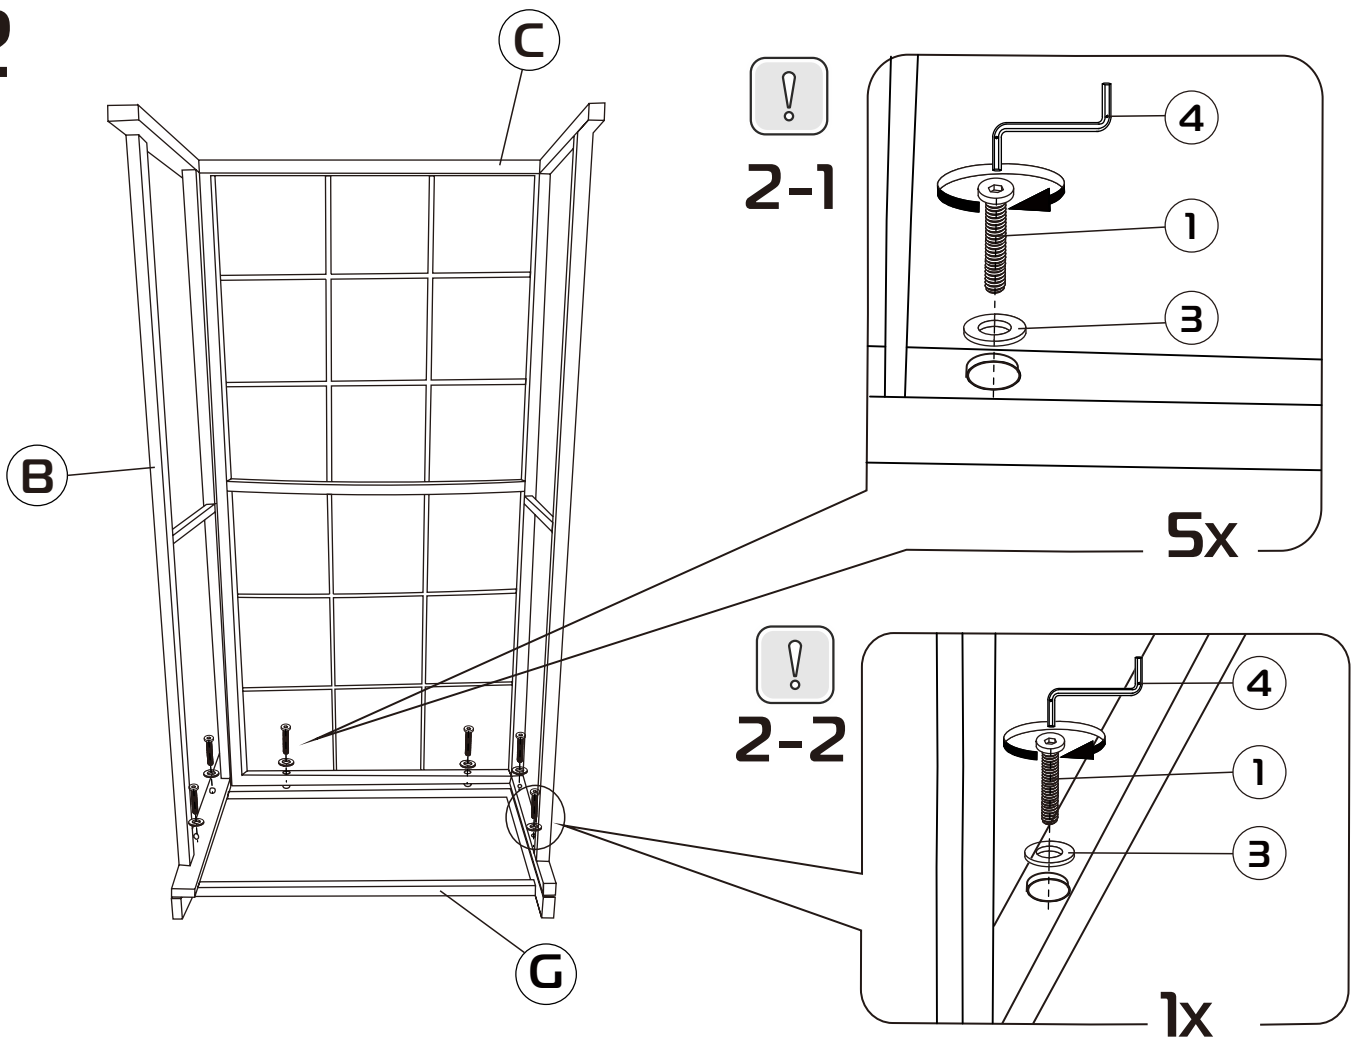


3

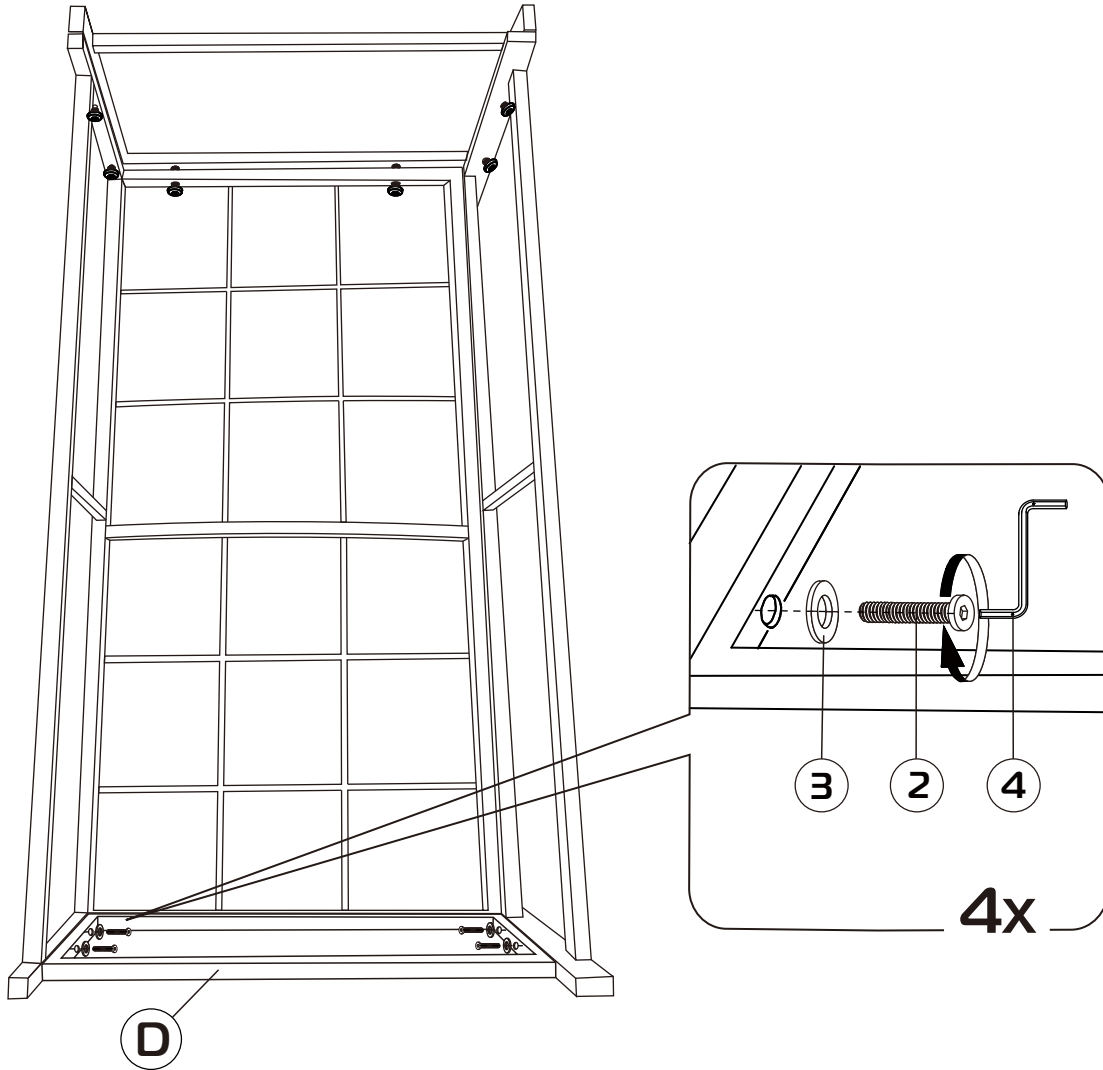

4

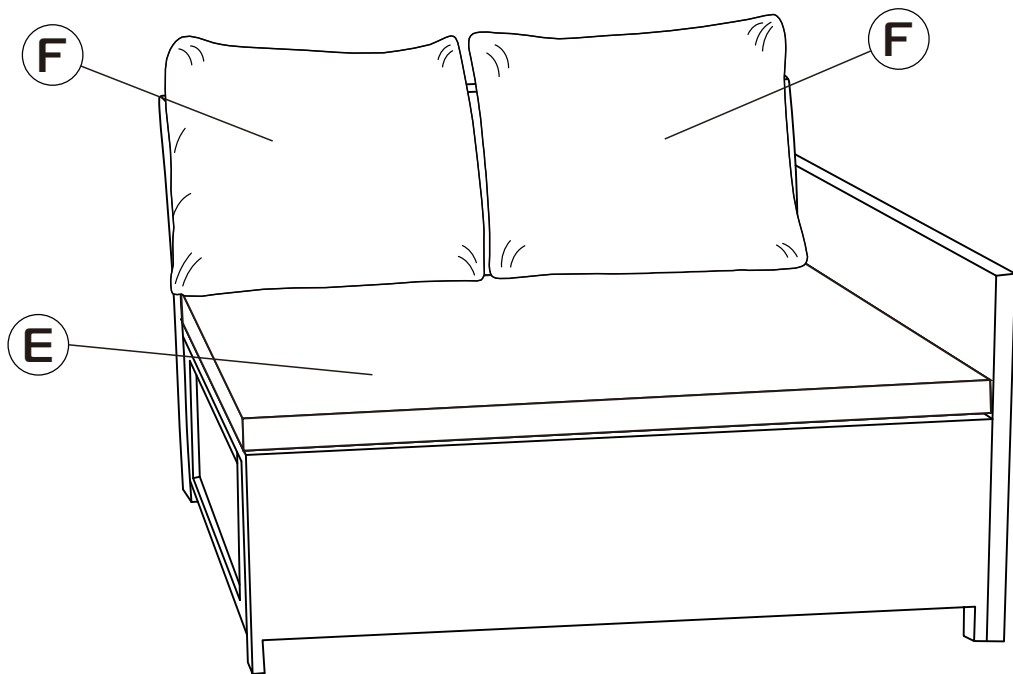


Параметры 1

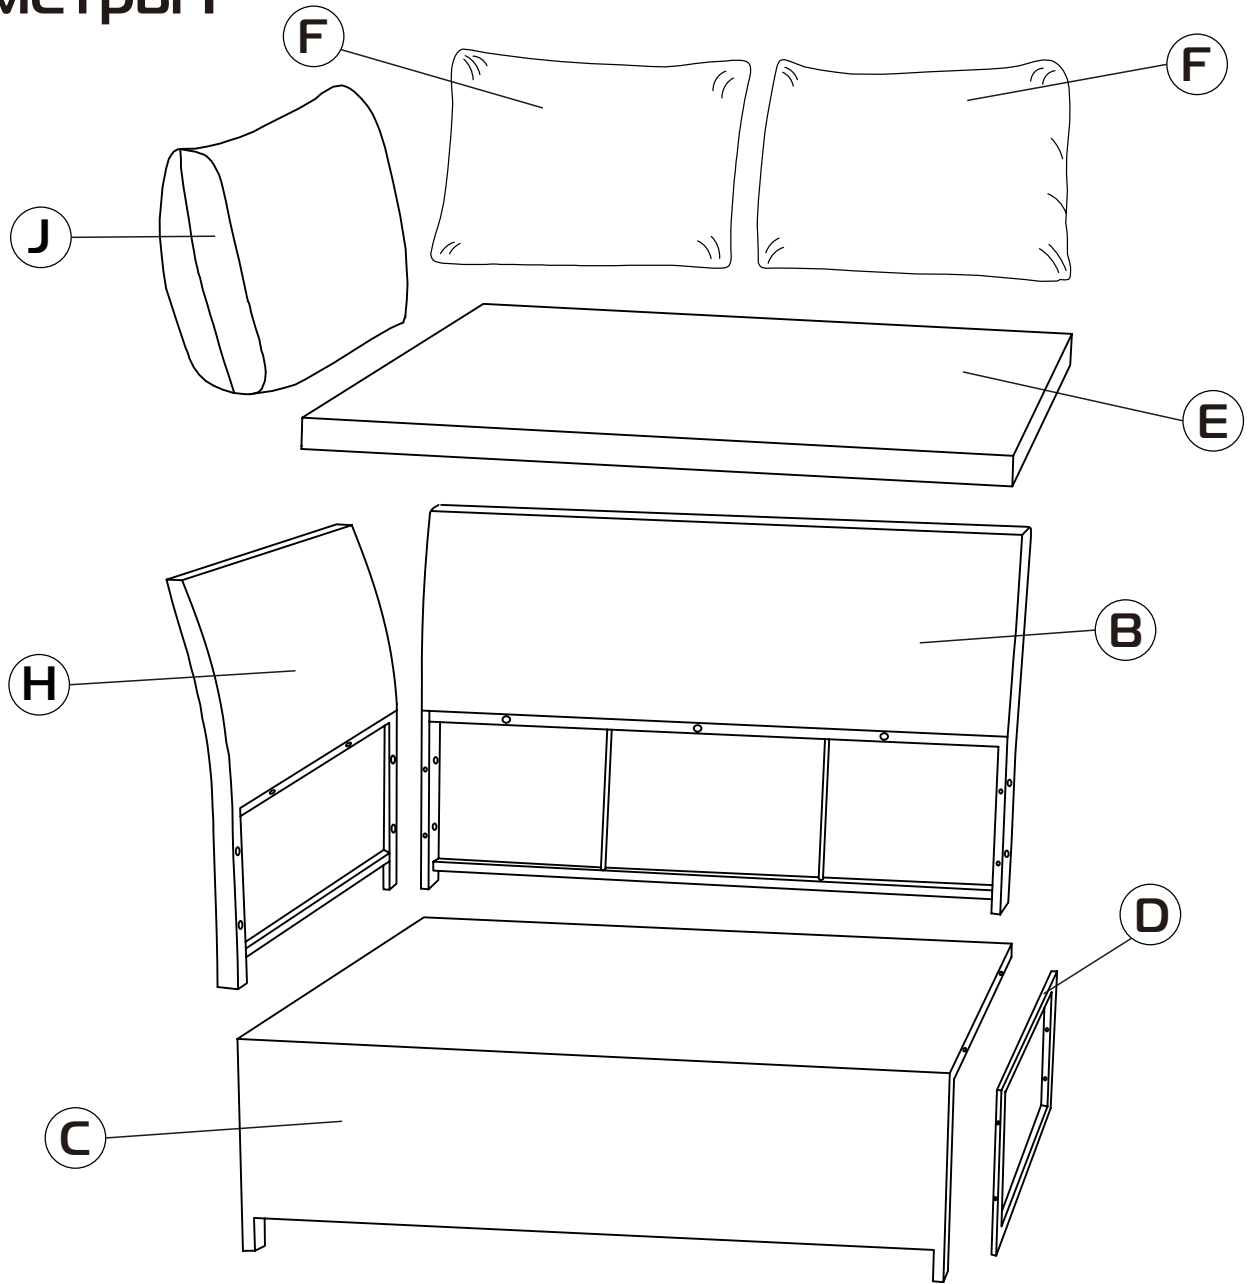


Ⓑ -x1 Ⓒ -x1 Ⓓ -x1 Ⓔ -x1 Ⓕ -x2 Ⓖ -x1 Ⓙ -x1


1:1

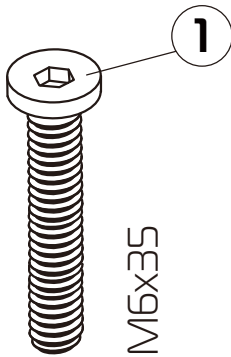


x9

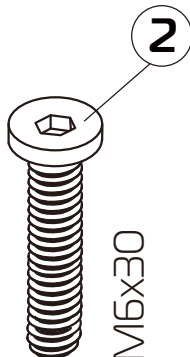

x4

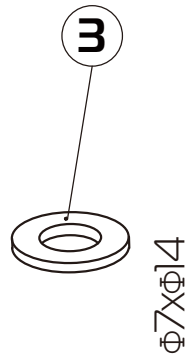


x13

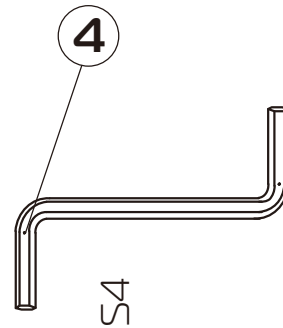


x1




1

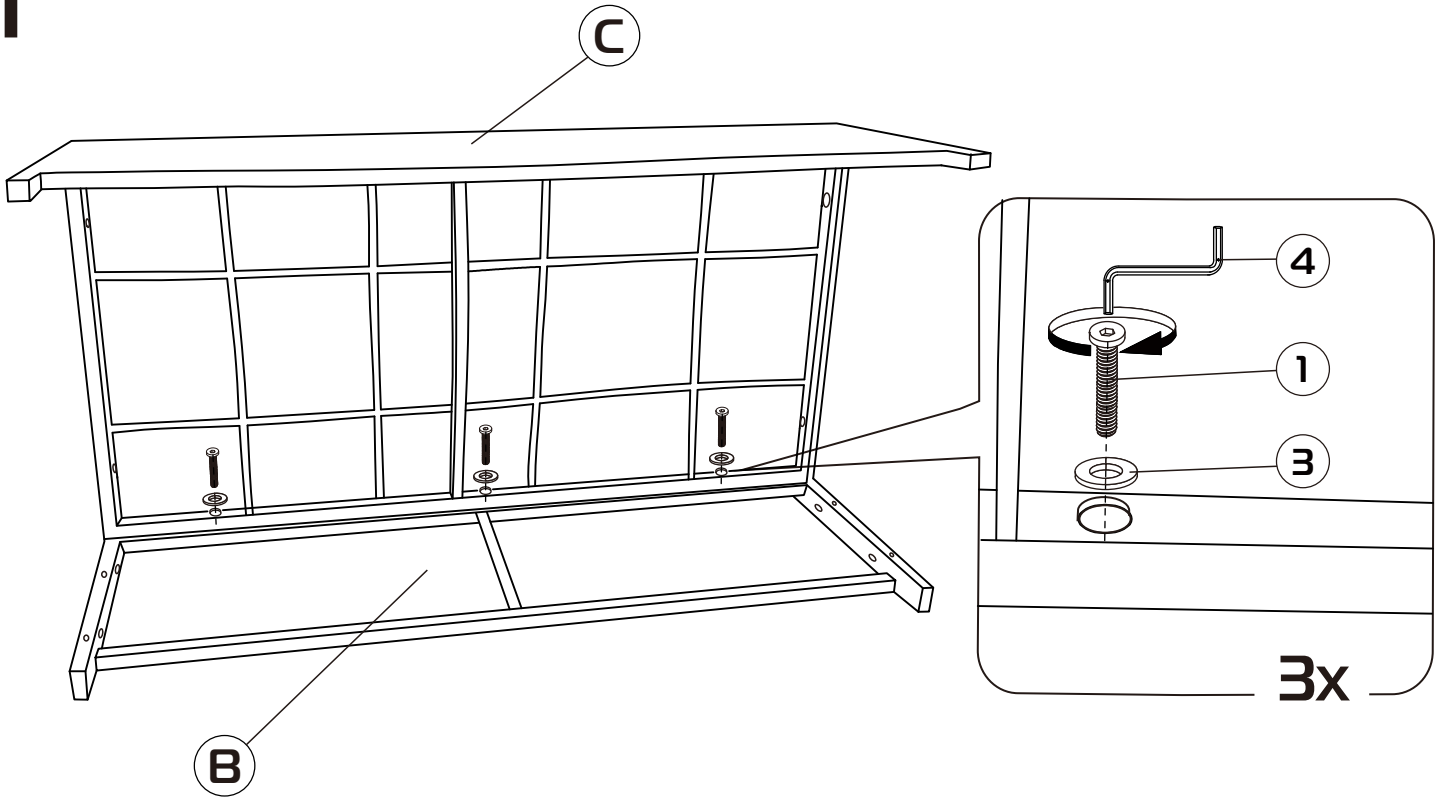


2

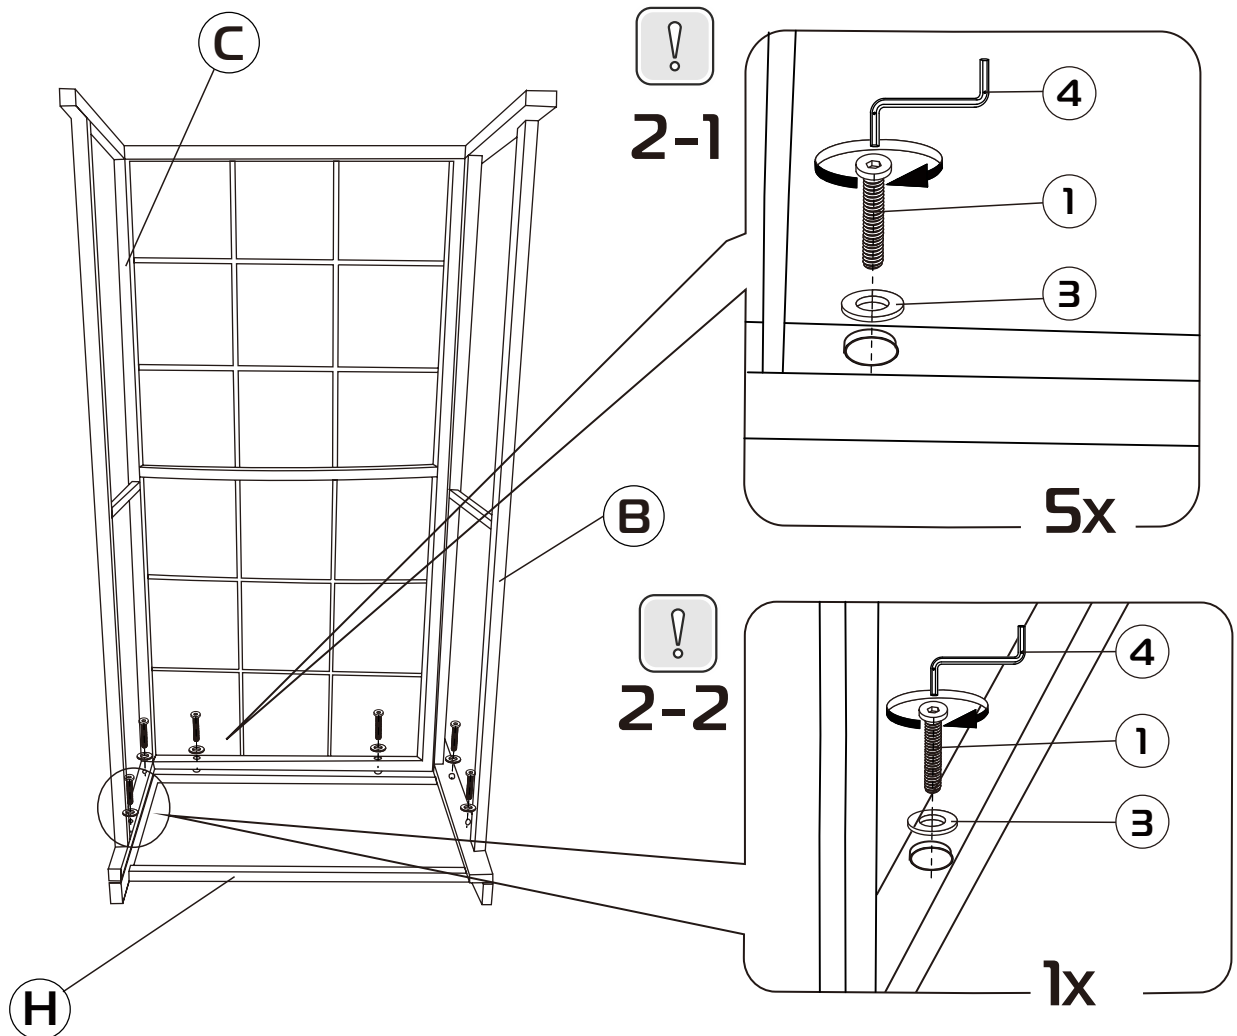


3

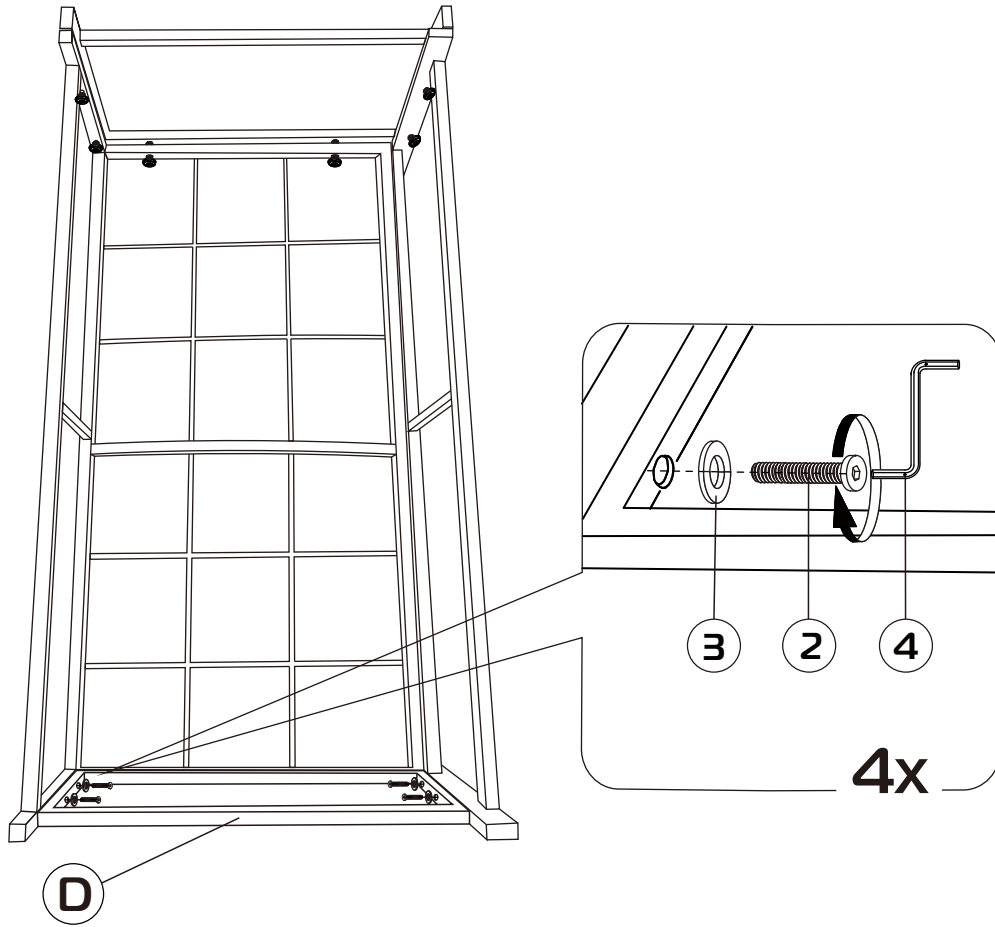

4

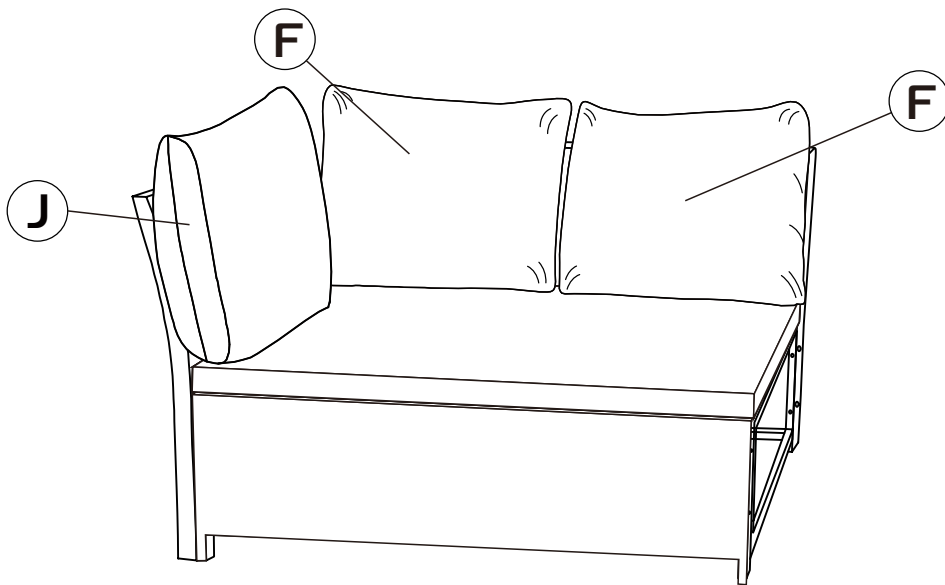

1:1


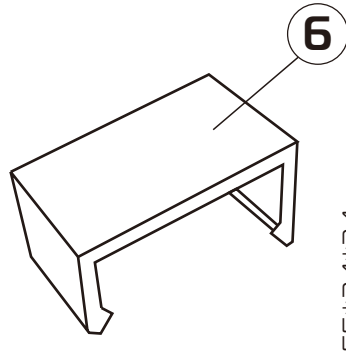


55*34*34mm


x4



1

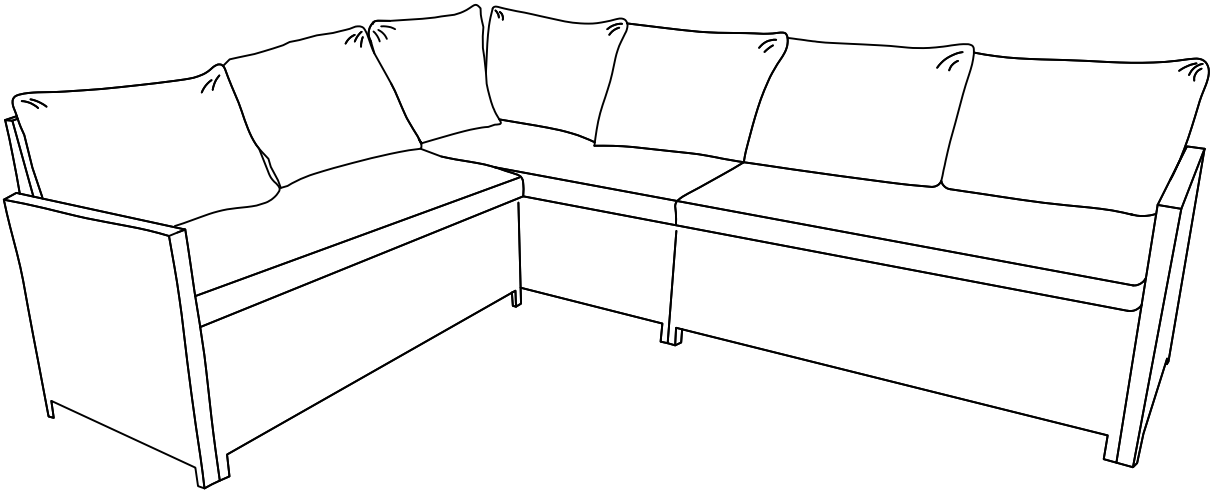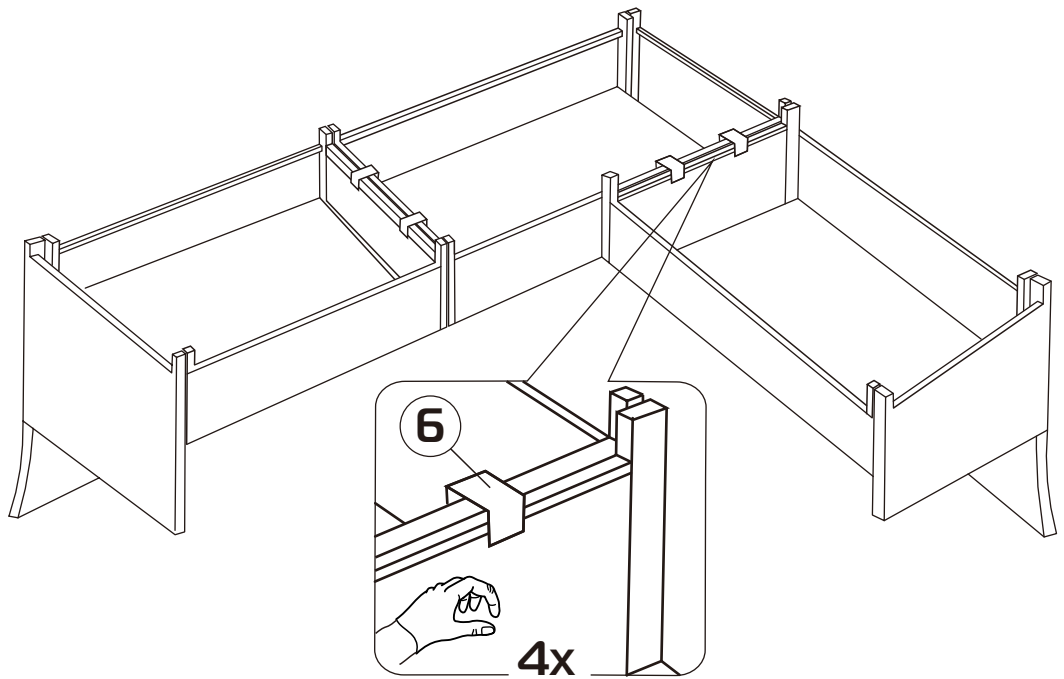


Параметры 2

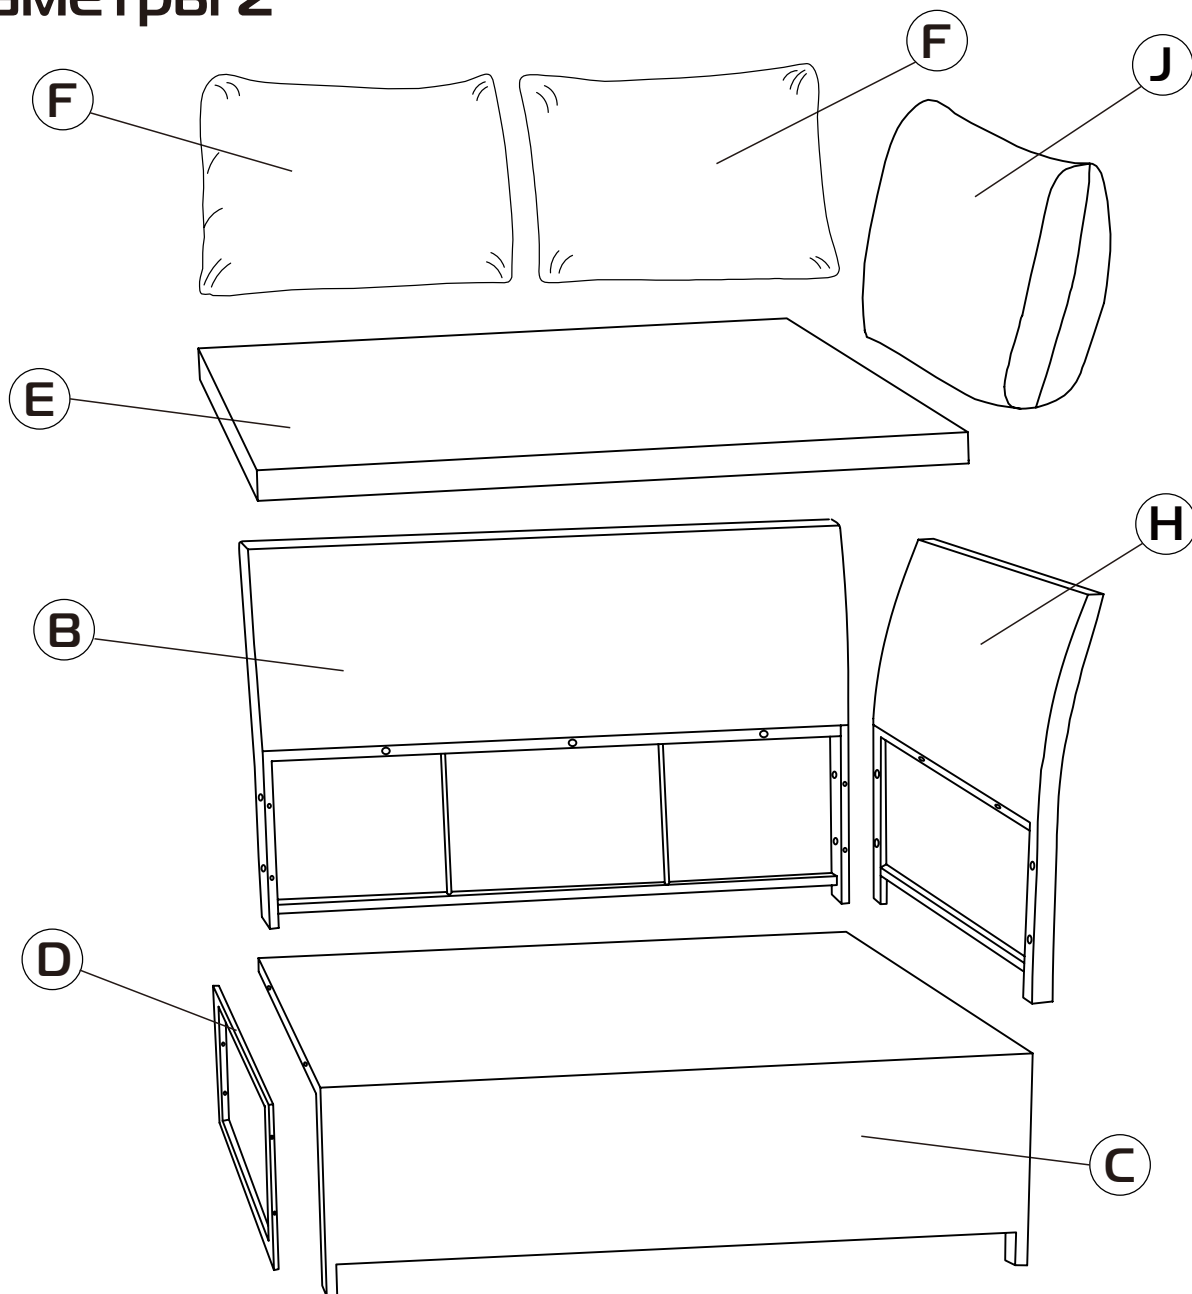


Ⓑ -x1 Ⓒ -x1 Ⓓ -x1 Ⓔ -x1 Ⓕ -x2 Ⓖ -x1 Ⓙ -x1


1:1

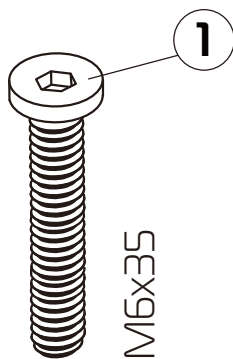


x9

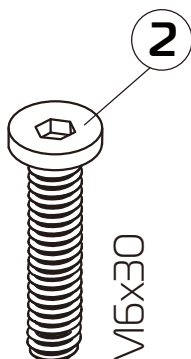

x4

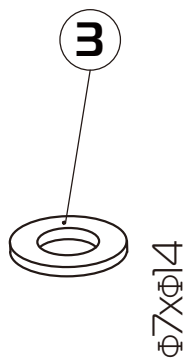


x13

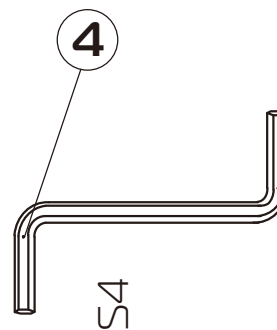


x1




1

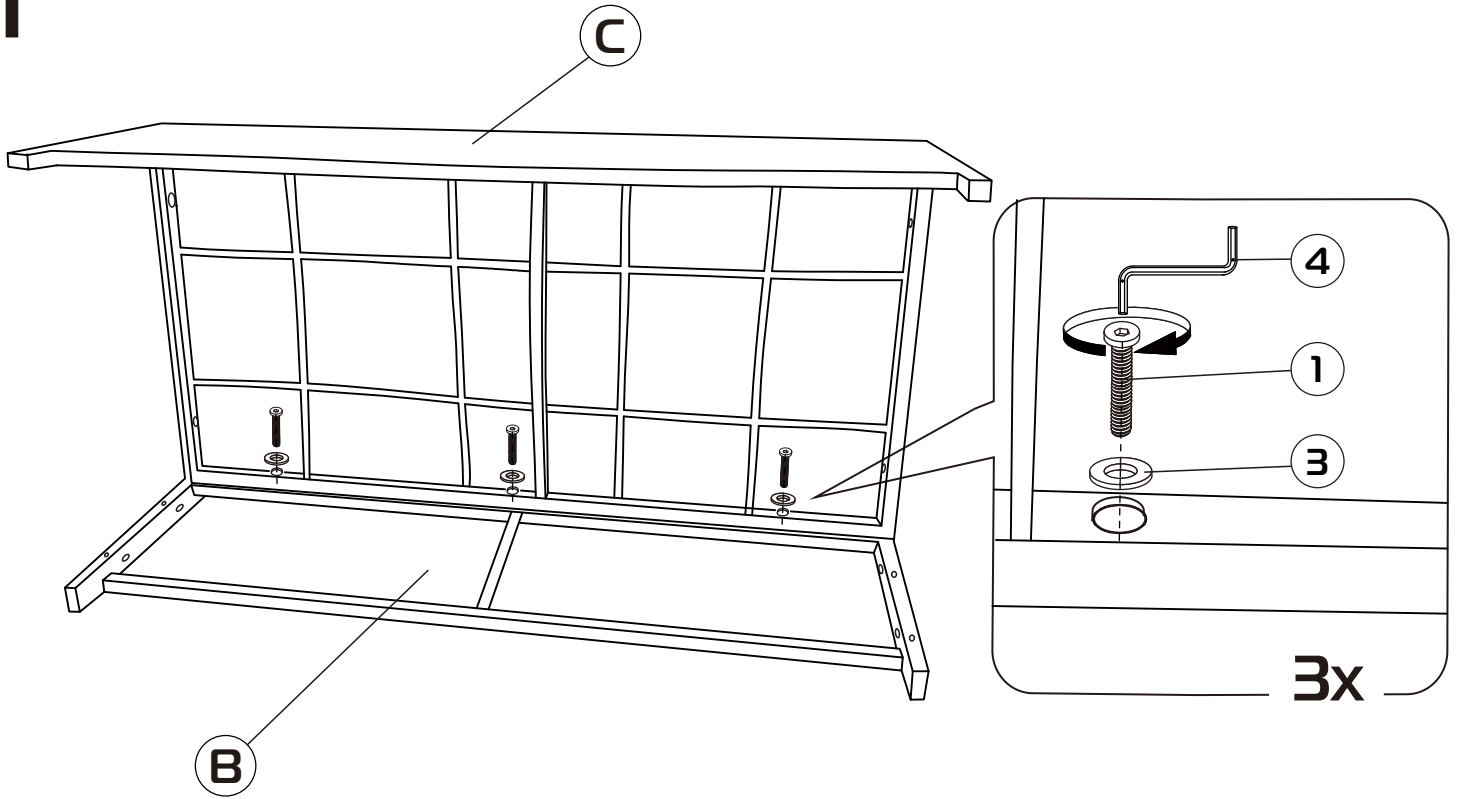


2

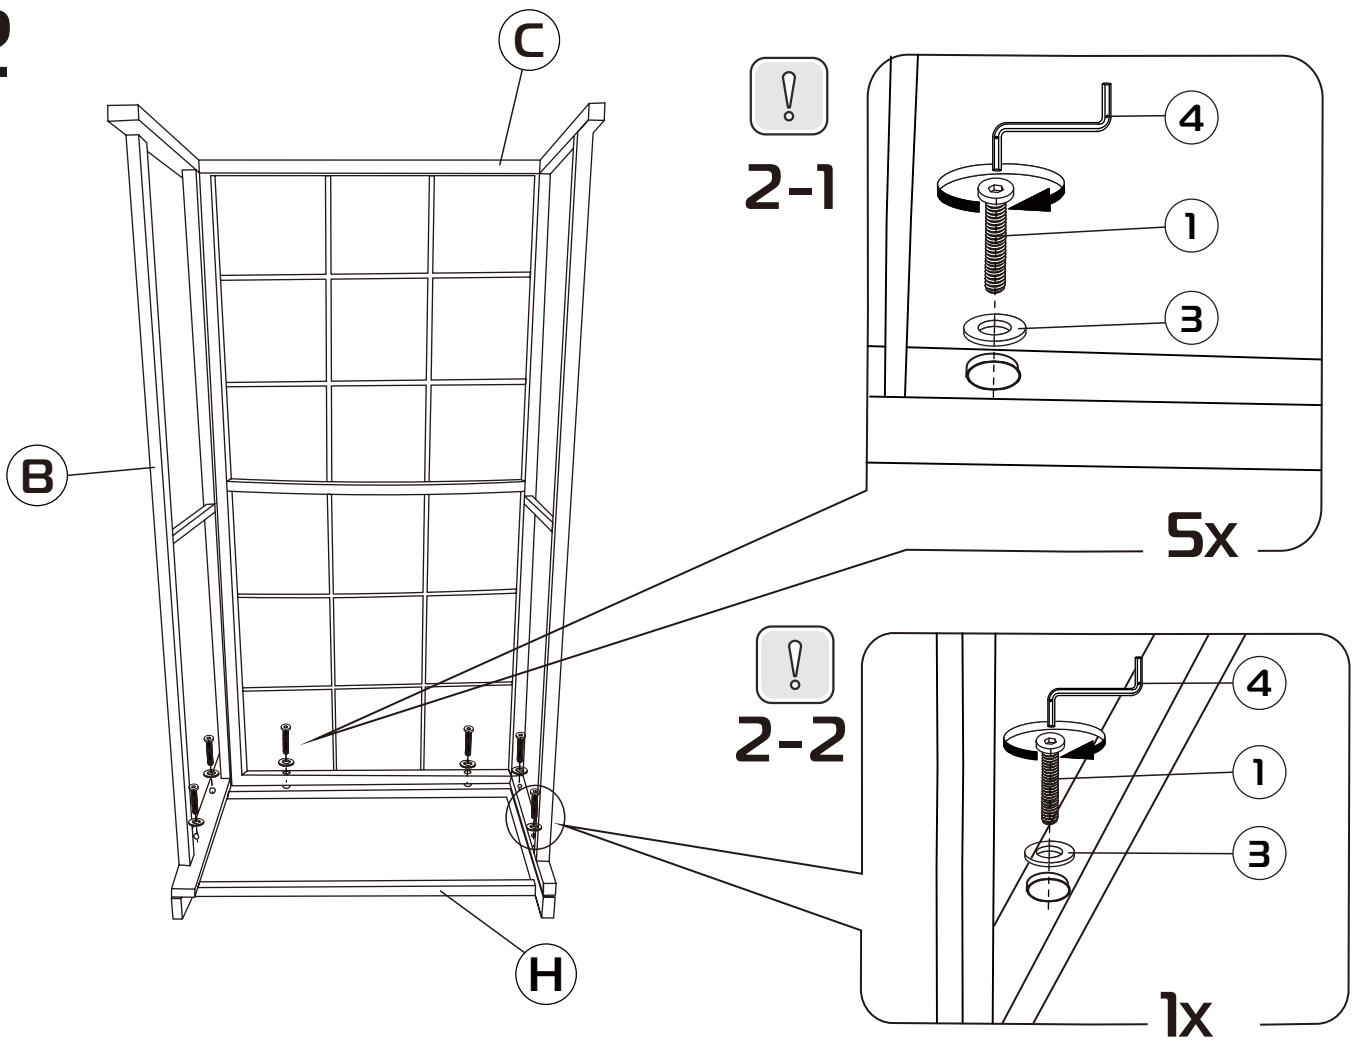


3

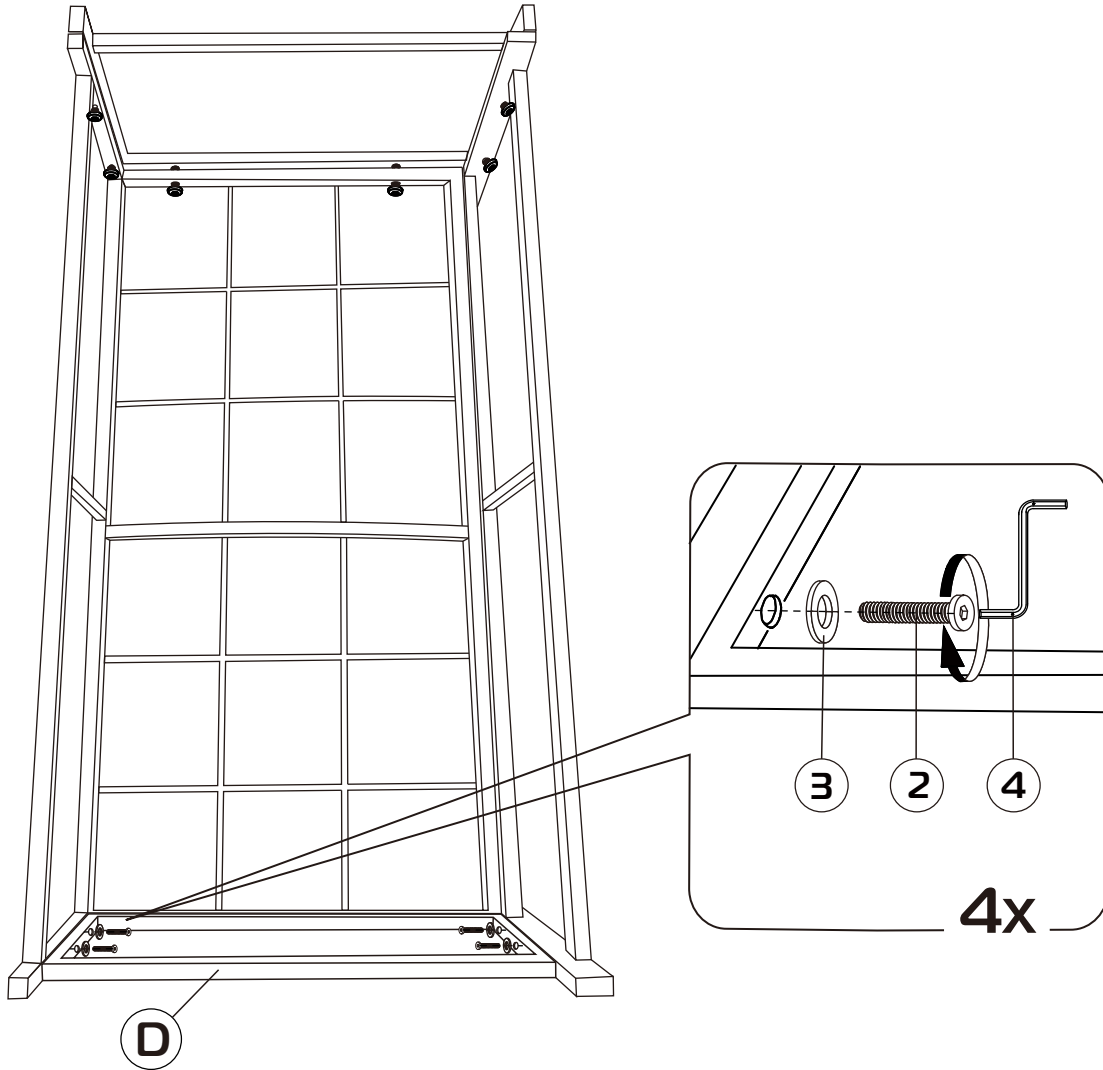

4

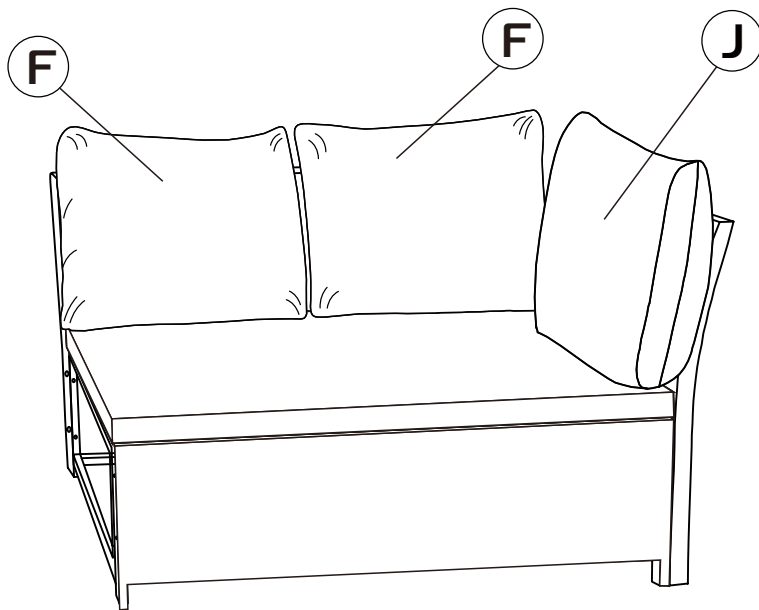

1:1


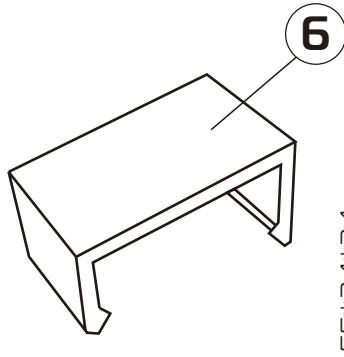











55*34*34mm

x4




1

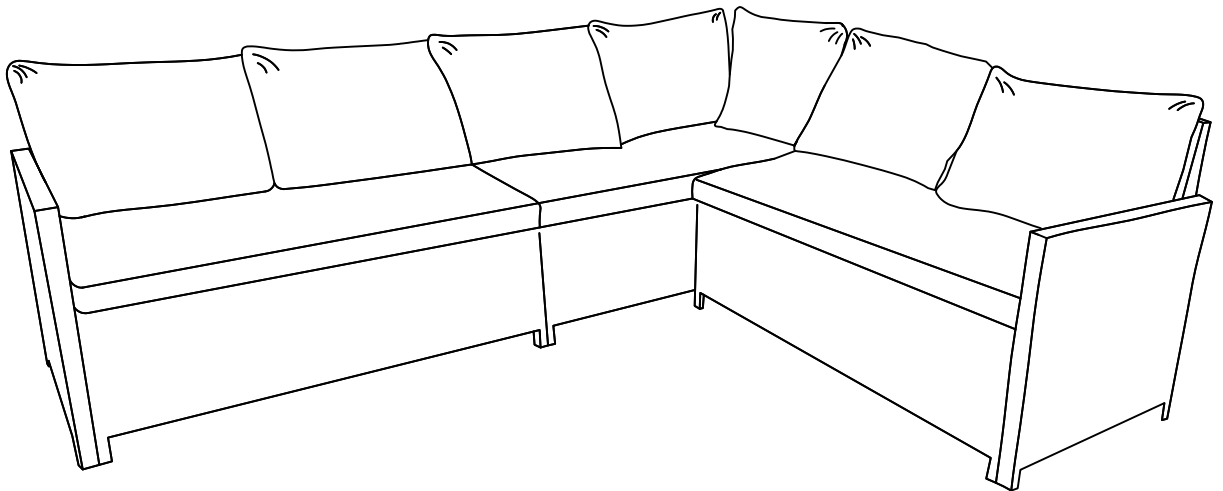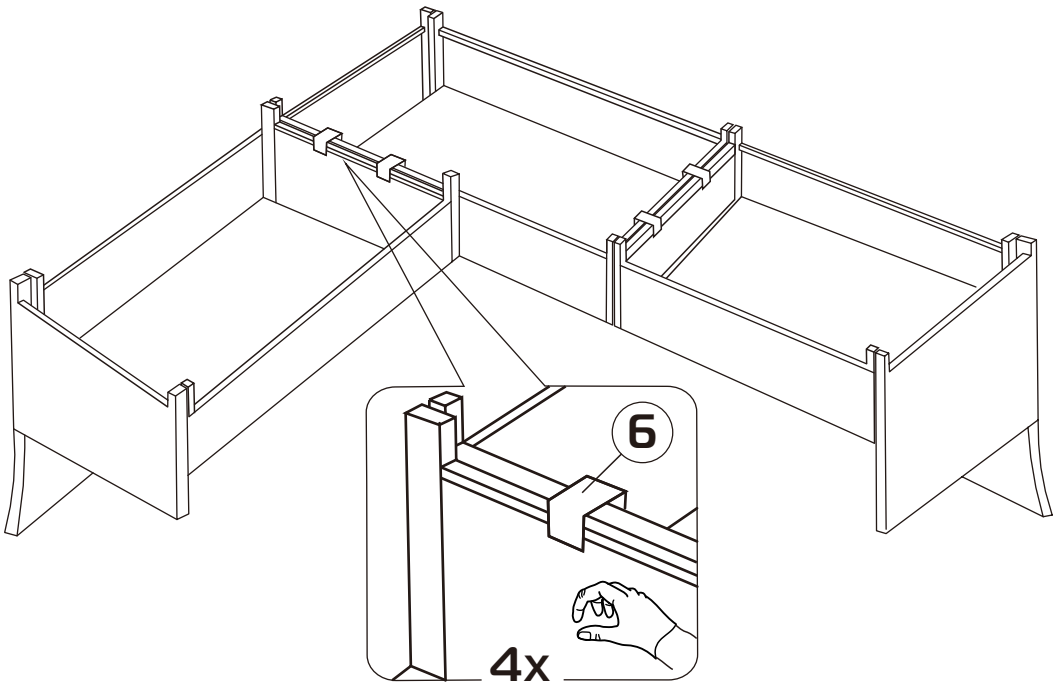

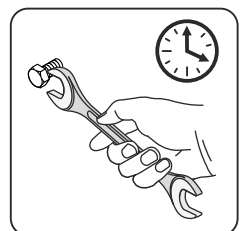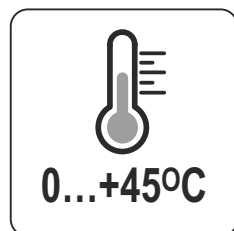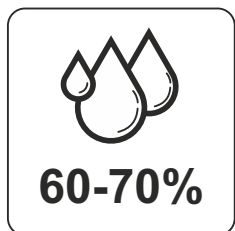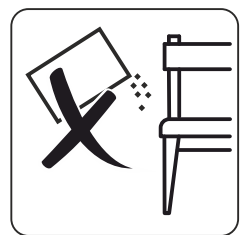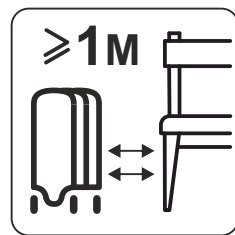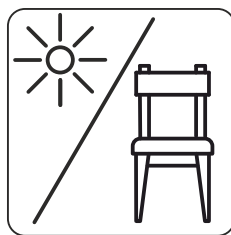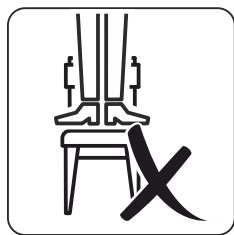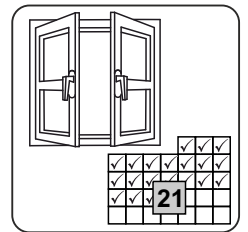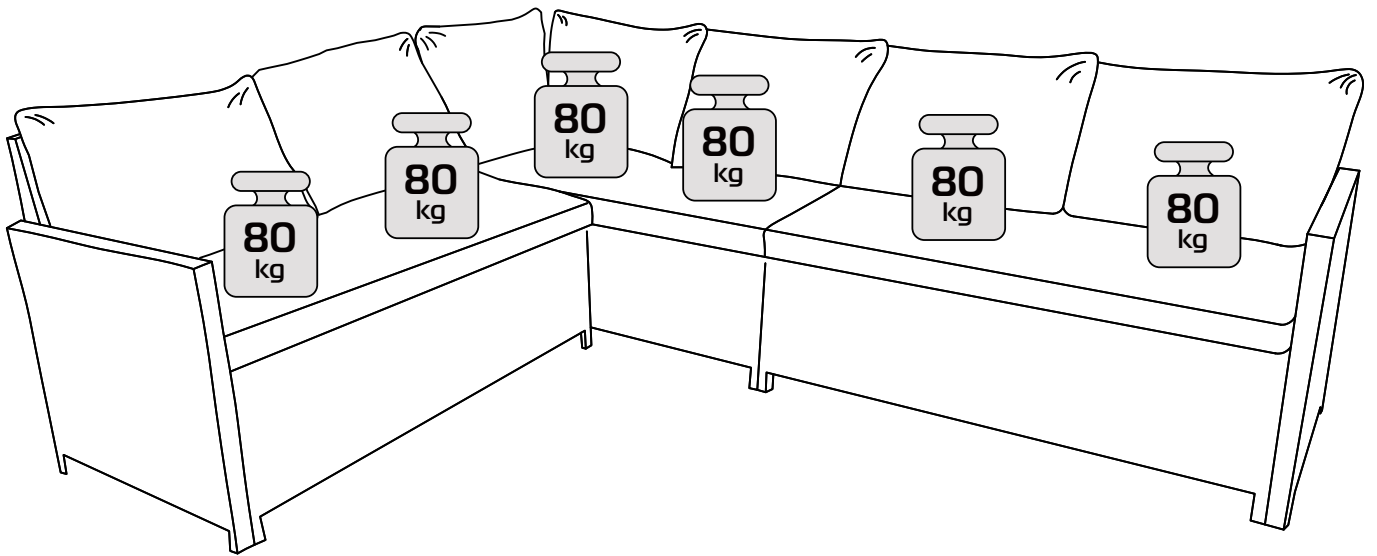


● Rectangle coffee table

1

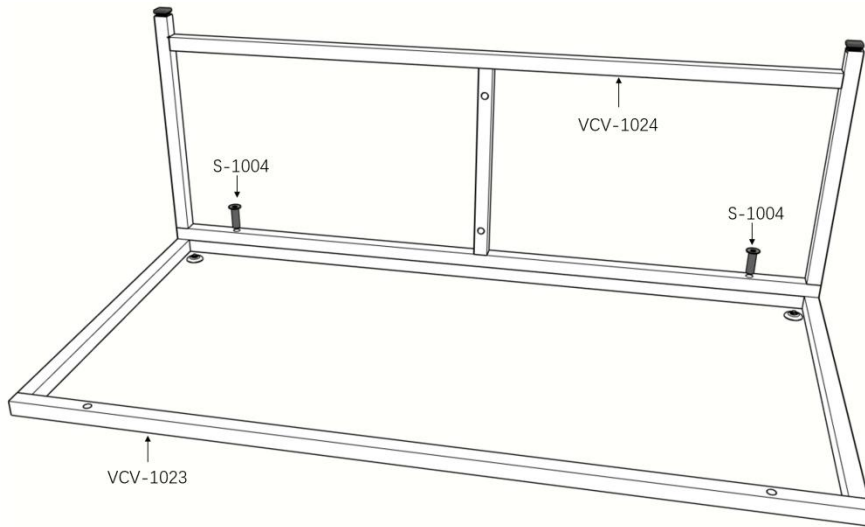


VCV-1023*1, VCV-1024*1, S-1004*2

2

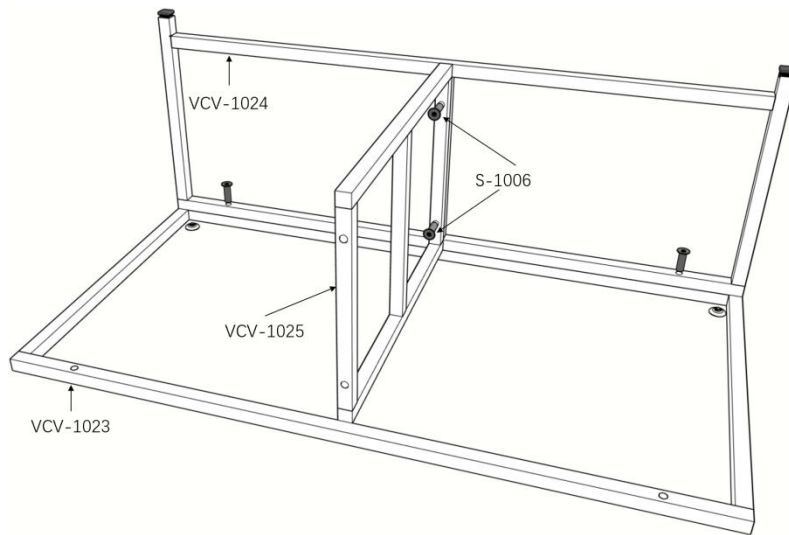


VCV-1025*1, S-1006*2

3

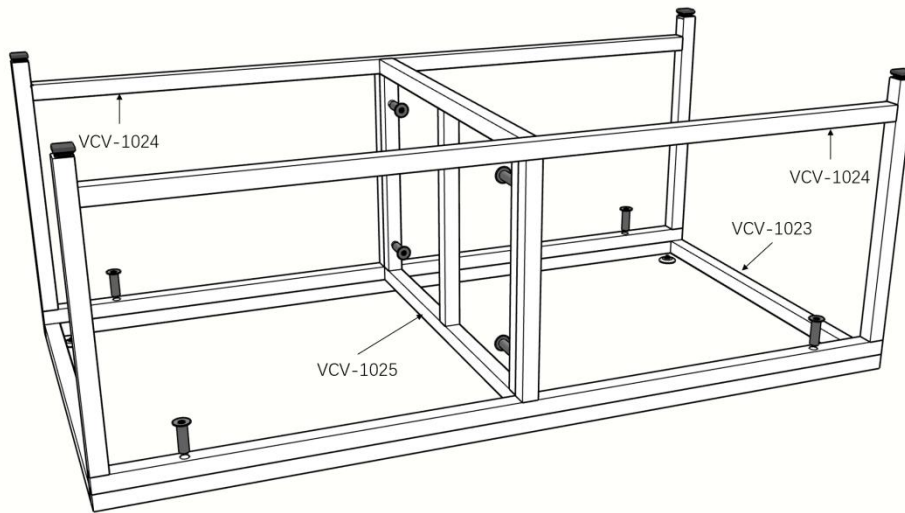

VCV-1024*1, S-1004*2, S-1006*2

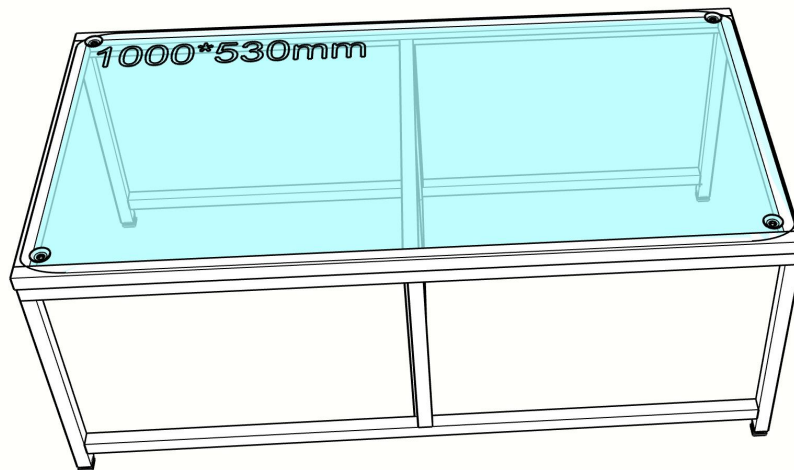

G-1003

Tight all the screws to 60% first then tight to 100%.


Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.

Serrez toutes les vis à 60% d'abord puis serrez à 100%.

Primero apriete los tornillos al 60% y después al 100%.


● Square Stool

1

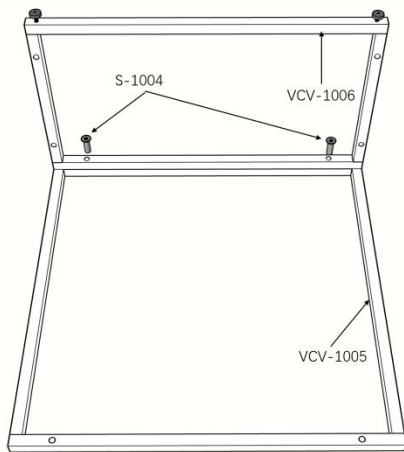


VCV-1005*1, VCV-1006*1, S-1004*2

2

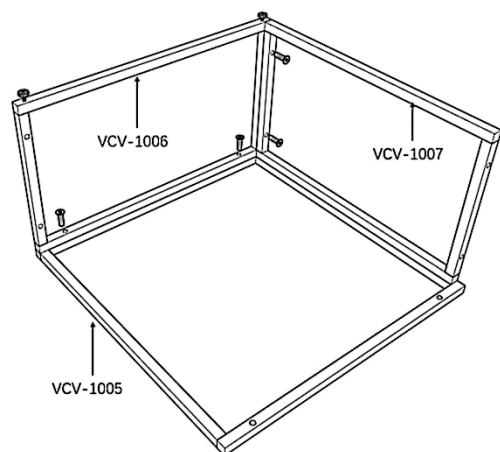


VCV-1007*1, S-1004*2

3

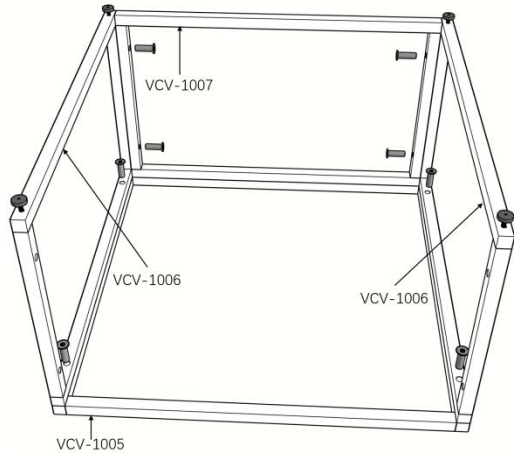


VCV-1006*1, S-1004*4

4

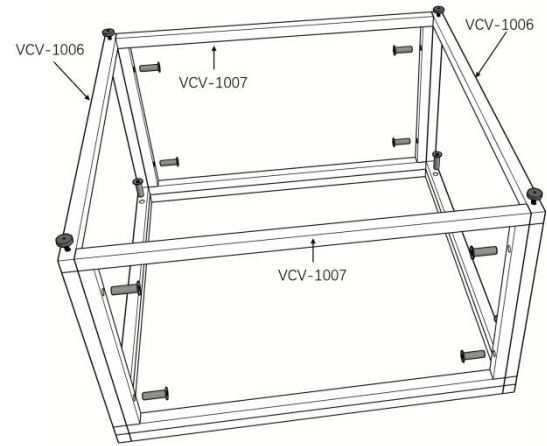

VCV-1007*1, S-1004*4

5

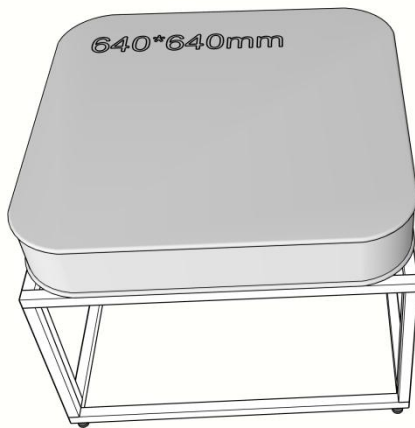

VCV-1010*1

Tight all the screws to 60% first then tight to 100%.

Während der Montage alle Schrauben zuerst 60% anziehen, dann zu 100%.

Serrez toutes les vis à 60% d'abord puis serrez à 100%.

Primero apriete los tornillos al 60% y después al 100%.

